


Installation Guide of ALTIS-Y3

Thanks for choosing our electric dirt bike ALTIS-Y3!
To restore ALTIS-Y3 correctly, please refer to the
installationguide:




1. Open the package, take out the parts,
and prepare for installation

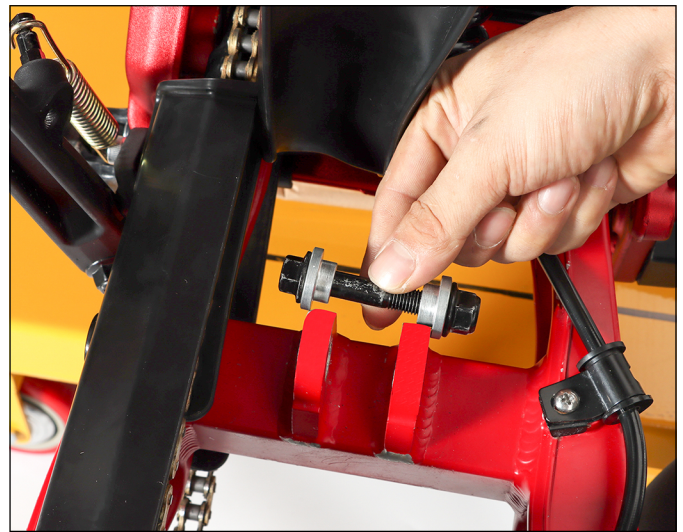

2. Remove the center-mounted screw and
set it aside. Install the center-mounted
shock absorber




3. The fixing holes for the screws and
shock absorber springs on both sides of
the cylinders

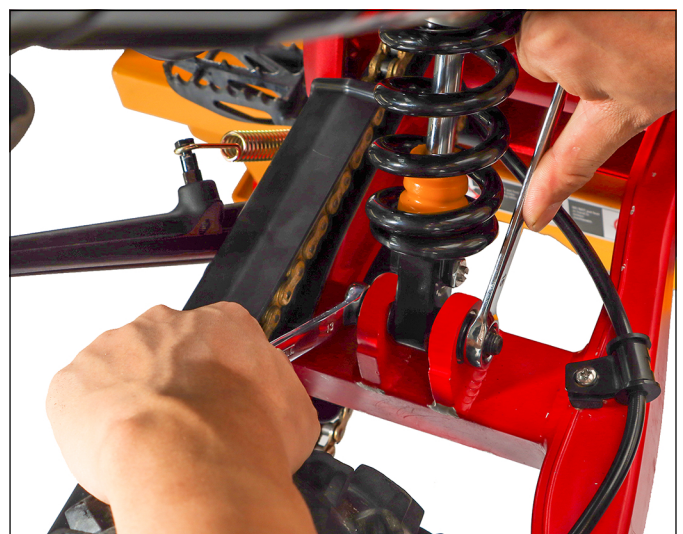

4. Install the central shock absorber spring
and lock both sides simultaneously



5. Remove the screws from the installation position of the handlebar and install the handlebar

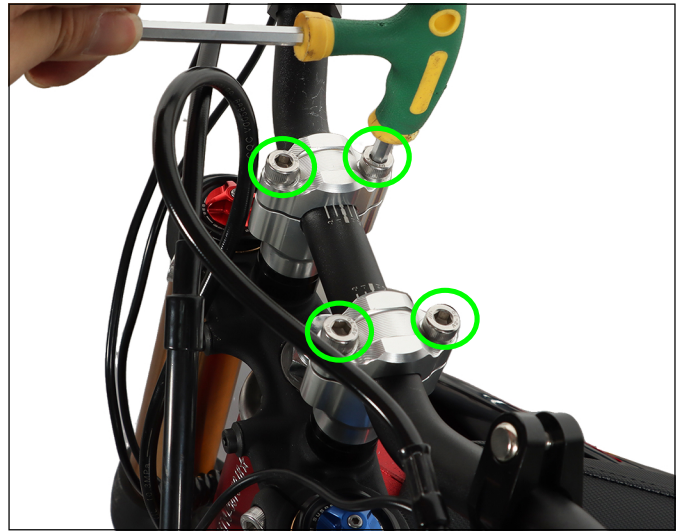

6. Adjust the handle to the left and right center, and fix the screws on both sides evenly to lock the handlebar



7. Unscrew the key switch screw to secure the position of the bracket key




8. Remove the three screws from the mudguard hole and install the mudguard



9. Fix the mudguard screws



10. Install the corresponding bottom hole of the front face shield

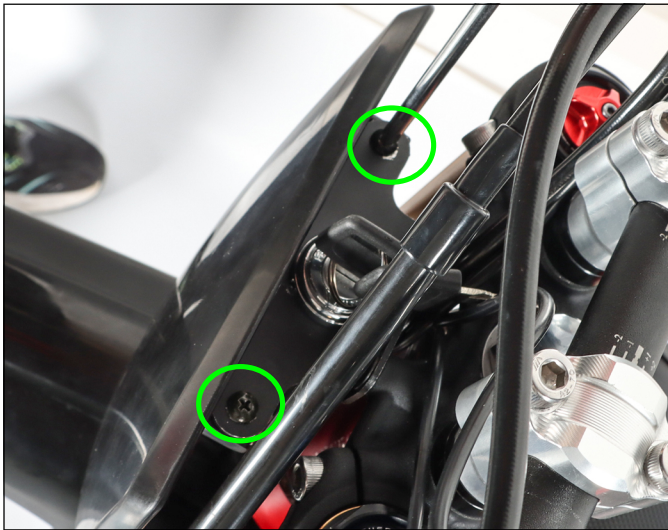

11. Secure the top screw to fix the baffle



12. Remove the fixing screws to install the handlebar cushion pad




13. Unscrew the key switch screw to secure the position of the bracket key



14. Unscrew the screws at two positions as shown in the figure to install and fix the brake




15. Disassemble the tire mounting rod to install screws

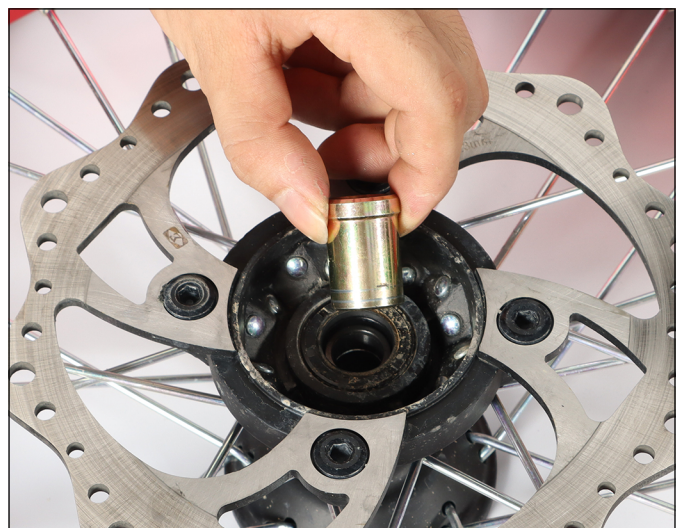

16. Circular cylinder stuck in position on the diagram



17. Observe the brake pad mount position and install the tire

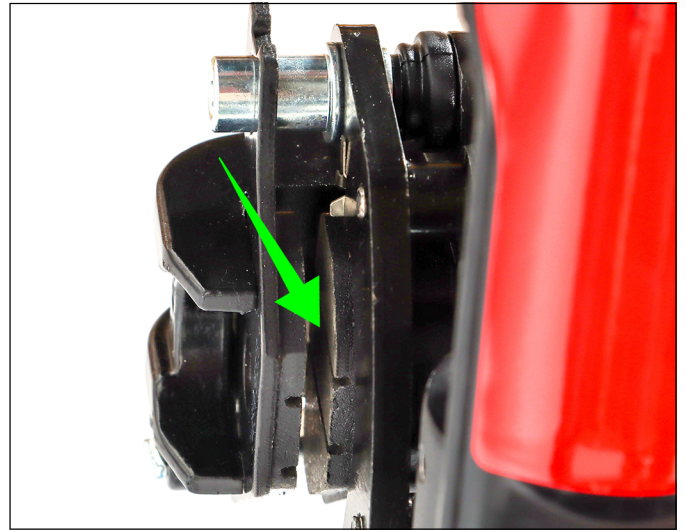

18. Pay attention to installing the disc brake pads in the middle



19. Insert the long rod and tighten the nut




20. Fix and lock the tire on both sides simultaneously



21. Tighten the two screws as shown in the picture to complete the tire locking process



22. Loosen the screws and install the foot pedal As shown in the picture, the screw passes through the foot pedal and the spring

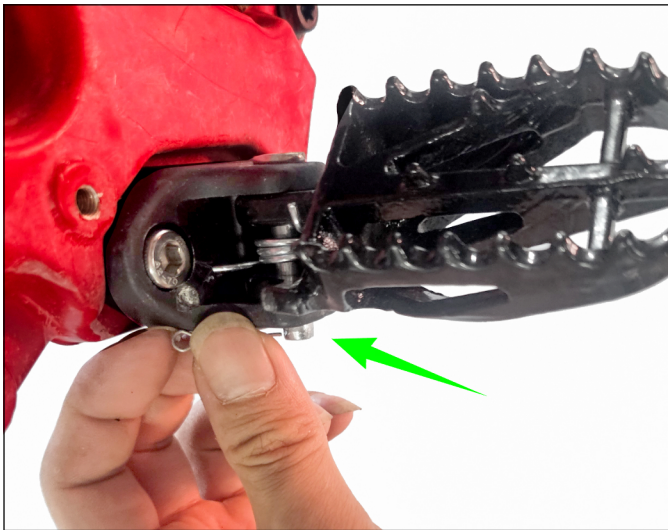


23. Insert the pin to complete the foot pedal installation



24. Open the screw cap at the bottom of the rear tail



25. Insert the power cord into the battery socket

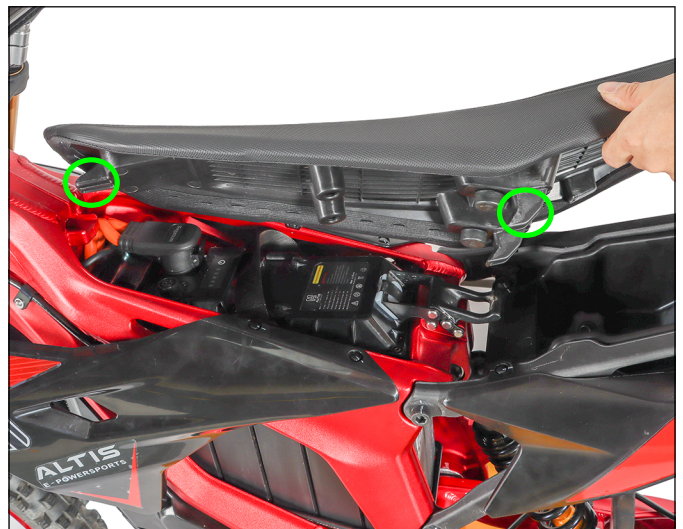

26. Secure the seat cushion in place with the corresponding seat cushion buckle



27. Lock the base screws tightly



28. Complete installation